

*****ATTENTION*****

The battery on this cart has been deactivated at the factory.


The battery must be reactivated before the cart will run. Follow the instruction below.

For additional assistance call 800-542-3373 and ask for the Service department.


- 1) Reach under the back of the rear cover (right side) and pull the seat latch toward you. As you hold the seat latch open, push the seat forward toward the handlebars. The seat legs should lift all of the way out of the rear cover.




- 2) With both hands, lift the rear cover up and over the rear bumper while rotating it completely backwards. Set the cover aside.

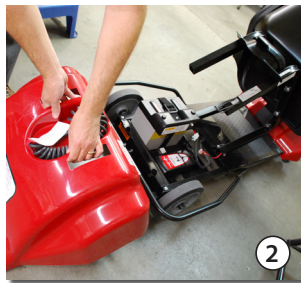

- 3) Locate the battery and battery cover. There is a circuit breaker mounted in the battery cover. The circuit breaker is located closest to the center of the cart.

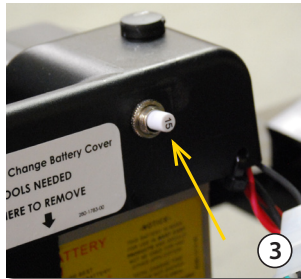

- 4) Gently push the circuit breaker's reset button. The button should stay depressed once pushed.

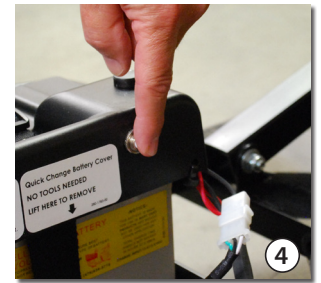

- 5) Replace the rear cover and lower the seat while gently guiding the seat legs back through the holes in the cover. Ensure the seat "clicks" and latches securely.



- 6) Sit in seat and push rocker switch located on the control box to the "ON" position.



- 7) Read all instructions and warnings before operating.

- 8) Test-drive cart to ensure proper operation.

If you need assistance, please call Mart Cart Customer Service at (800) 548-3373, or (479) 636-5776.

For detailed product information please visit: www.martcart.com

Option 280-1986

mart cart

Mart Cart® is a quality product line of Assembled Products® Corporation
115 E. Linden Street • Rogers, Arkansas 72756 USA

Specifications are subject to change without notice .